



#### Inspection ladder

- You can only open the ladder from the bottom with a ruko lock.

#### Universal Ladder

- You can open the ladder from bottom with a ruko lock AND you can open the ladder from the top with a release pin.

#### Fire Escape Ladder

- You can only open the ladder from top or each level with a release pin.

\* The correct length of the ladder should be the measure length (blue line on drawing) deducted the distance length from the ground (0,4m)

**Ruko lock**



**Ruko lock with wire**



**Releasepin**



**Further information:**

Brian Petersen  
+45 21667438  
bp@modum.dk